



## POLYPACK<sup>®</sup> M

Batch or *manual* preparation of polymers,  
*powder and emulsion*

- Capacity: from 200 to 3000 litres
- Tanks in high density polyethylene anti-UV treated with inspection hatch
- Integrally moulded graduations
- Powder disperser with hopper (7 litres capacity)
- Electric mixer on the tank
- Outlet and drain connections

## POLYPACK<sup>®</sup> AP

Continuous and *automatic* preparation of polymers,  
*powder*

- Extraction / dosing flow: up to 13 340 l/h in standard version
- Design:
  - A 3 compartment palletised tank(\*): preparation, ageing, dosing
  - A system to "wet" the powder
  - From 1 to 3 mixers (according to model)
  - Control box
  - A dry feeder with supply hopper
  - Level detectors for control
- Options:
  - Hopper loader for automatic filling of powder feeder
  - Pump fixed on the tank
  - Dual operation: powder + emulsion
  - Dilution unit from 2 to 20 m<sup>3</sup>/h



(\* AP430 version: palletised tank with 2 compartments.



Polypack<sup>®</sup> M 500

### • How to select the Polypack<sup>®</sup> AP

Extraction / dosing flow (l/h)

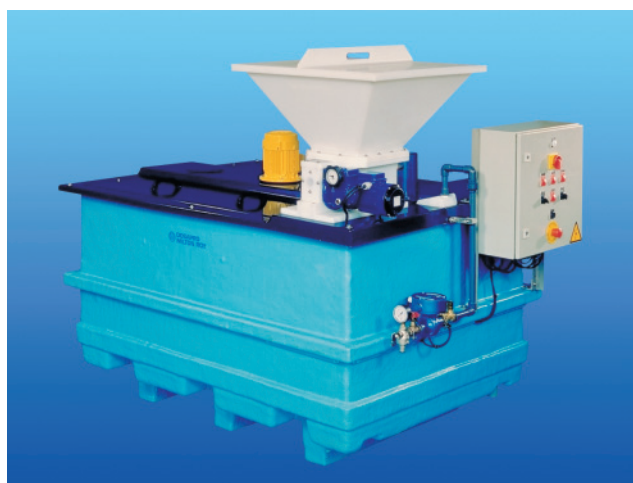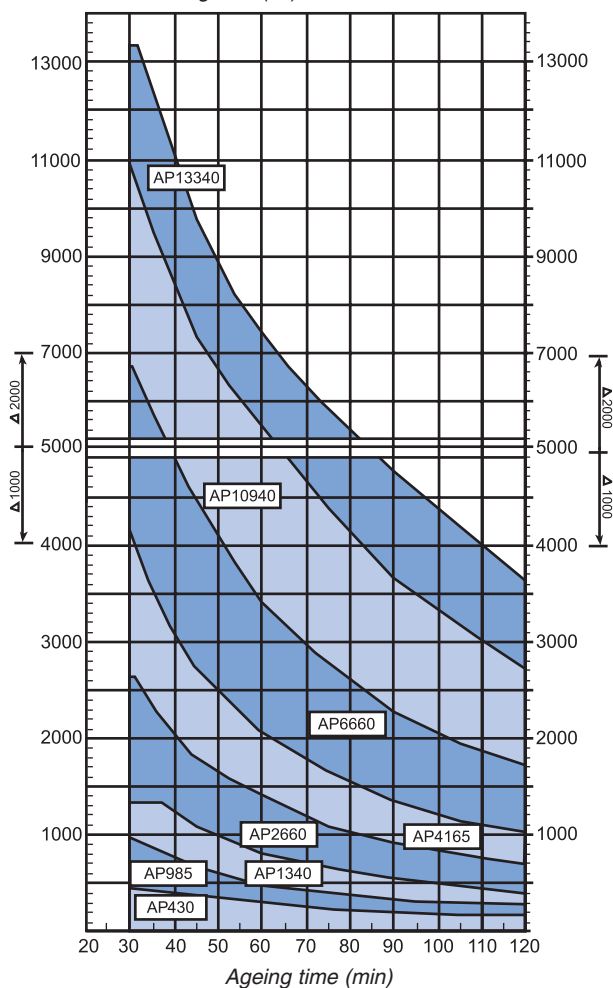

Polypack<sup>®</sup> AP 1340

## POLYPACK® AE


Continuous and **automatic** preparation of polymer emulsion

- Extraction / dosing flow: up to 4400 l/h in standard version
- Design:
  - A 3 compartment palletized tank: preparation, ageing, dosing
  - A water supply unit
  - One mixer fitted with 2 impellers
  - Level detectors for control
  - Dosing pump to feed the concentrated polymer emulsion
  - Control box

- **Options:**
  - Storage of the concentrated polymer
  - Distribution of diluted polymer
  - Dilution group from 2 to 20 m<sup>3</sup>/h

### • How to select the Polypack® AE

Extraction / dosing flow (l/h)

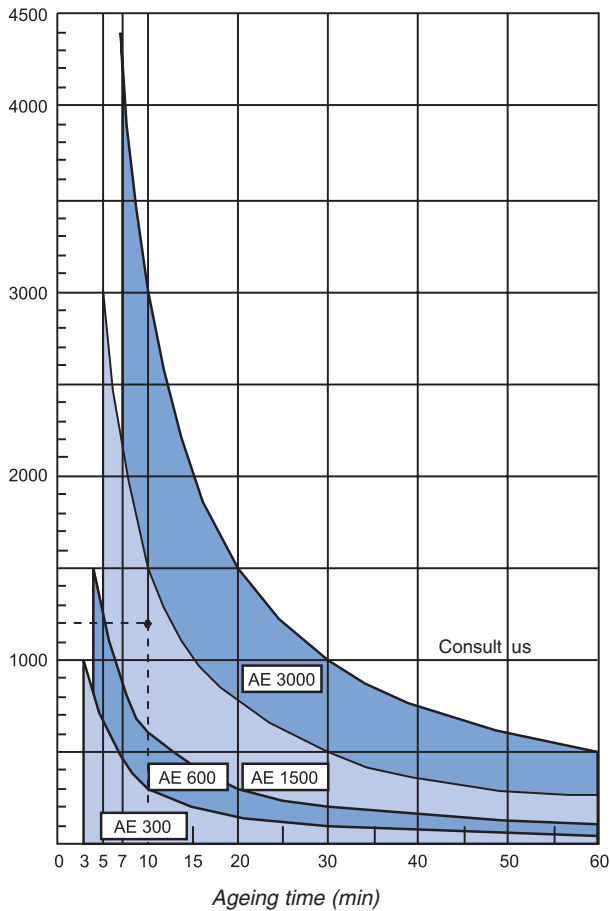

Polypack® AE 1500

#### For example:

For 10 minutes ageing time and final solution flow of diluted polymer of 1200 l/h, the model to select is the POLYPACK® AE 1500.



**FRANCE** - DOSAPRO MILTON ROY S.A.  
10, Grande Rue - 27360 Pont Saint Pierre  
Tel. : +33 (0)2 32 68 30 00 - Fax : +33 (0)2 32 68 30 93  
www.dosapro.com - email : contact@dosapro.com

**ESPAÑA** - DOSAPRO MILTON ROY IBERICA  
C/Embajadores, 100 - 28012 MADRID  
Tel. : +34 91 517 80 00 - Fax : +34 91 517 52 38  
www.dosapro.es - email : dmri@dosapro.es

**UNITED KINGDOM** - MILTON ROY (UK) LTD  
Oaklands Business Centre - Oaklands Park  
WOKINGHAM - BERKSHIRE - RG41 2FD  
Tel. : +44 118 977 1066 - Fax : +44 118 977 1198  
www.miltonroy pumps.co.uk - email : miltonroyuk@dosapro.com

**INTERNATIONAL SALES and PROJECTS DEPARTMENT**  
10, Grande Rue - 27360 Pont Saint Pierre (France)  
Tel. : +33 (0)2 32 68 30 12 - Fax : +33 (0)2 32 68 30 91

**SPARE PARTS DEPARTMENT/PIÈCES DE RECHANGE**  
10, Grande Rue - 27360 Pont Saint Pierre (France)  
Tel. : +33 (0)2 32 68 30 01 - Fax : +33 (0)2 32 68 30 92  
email : spare.parts@dosapro.com

**INTERNATIONAL TECHNICAL ASSISTANCE/ASSISTANCE TECHNIQUE**  
10, Grande Rue - 27360 Pont-Saint-Pierre (France)  
Tel. : +33 (0)2 32 68 30 02 - Fax : +33 (0)2 32 68 30 96  
email : support@dosapro.com

**DOSAPRO MILTON ROY EN FRANCE :**  
Angers, Bordeaux, Lille, Lyon, Nancy, Paris, Rouen